SCOTT

CMX118

GB

INSTRUCTION MANUAL

DESCRIPTION

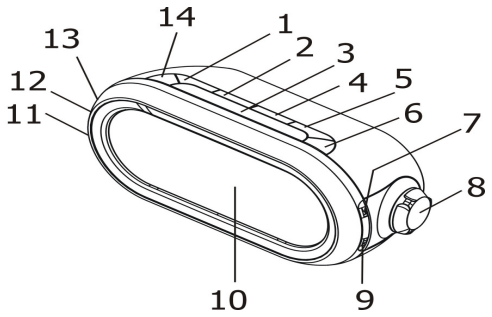

1. ALARM SET
2. SLEEP
3. SNOOZE
4. ALARM/ OFF
5. HOUR
6. MIN
7. MOOD LIGHT ON/OFF
8. VOLUME/KNOB
9. FUNCTION SWITCH (AUTO-OFF-ON)
10. DISPLAY
11. BAND SWITCH
12. TUNING KNOB
13. DIMMER SWITCH FOR INTENSITY OF LED DISPLAY (HI-LOW)
14. TIME SET

NOTE: THE NORMAL FUNCTION OF THE PRODUCT MAY BE DISTURBED BY STRONG ELECTROMAGNETIC INTERFERENCE. IF SO, SIMPLY RESET THE PRODUCT BY PULLING OUT THE MAINS PLUG, PLEASE USE THE PRODUCT IN ANOTHER LOCATION. IF A TEMPORARY DYSFUNCTION OCCURS, UNPLUG THE MAINS PLUG IF THERE IS NO BACKUP BATTERY IN THE RADIO, RESET THE TIME.

POWER SUPPLY

PLUG THE AC POWER CORD INTO THE AC HOUSEHOLD MAINS OUTLET. ENSURE THAT THE SUPPLY VOLTAGE IS AS INDICATED ON THE RATING PLATE ON THE BOTTOM OF THE UNIT.

BATTERY BACKUP

THIS RADIO HAS A BATTERY BACK UP CIRCUIT THAT WILL KEEP THE CORRECT TIME AND ALARM SETTING IN THE EVENT OF A TEMPORARY POWER INTERRUPTION. INSTALL A 9-VOLT 6F 22 BATTERY (NOT SUPPLIED) INTO THE BATTERY COMPARTMENT LOCATED ON THE BOTTOM OF THE UNIT.

MOOD LIGHT OPERATION

SLIDE LIGHT ON/OFF SWITCH TO TURN ON THE MOOD LIGHT. SLIDE THIS SWITCH AGAIN TO TURN OFF THE MOOD LIGHT.

TIME SETTING

1. PRESS AND HOLD THE TIME SET BUTTON.
2. PRESS THE MIN OR HOUR BUTTON TO SET THE CORRECT TIME.
3. RELEASE THE MIN AND HOUR WHEN YOU HAVE FINISHED SETTING.

RADIO OPERATION

1. SLIDE THE FUNCTION SWITCH TO “ON” POSITION. SLIDE THE BAND SWITCH TO “AM” OR “FM” POSITION.
2. TURN THE TUNING KNOB UNTIL THE DESIRED STATION IS RECEIVED.
3. ADJUST THE VOLUME CONTROL TO A COMFORTABLE LISTENING LEVEL.
4. TO TURN OFF THE RADIO, SET THE FUNCTION SWITCH TO THE “OFF” POSITION.

WAKE TO RADIO

1. SLIDE THE FUNCTION SWITCH TO “ON” POSITION.
2. TUNE TO THE DESIRED RADIO STATION AND VOLUME LEVEL.
3. SET THE ALARM TIME. PRESS AND HOLD THE ALARM SET AND AT THE SAME TIME PRESS MIN OR HOUR BUTTON TO ADJUST THE TIME.
4. SLIDE THE FUNCTION SWITCH TO “AUTO” POSITION.
5. YOU MAY WAKE UP BY RADIO WHEN THE PRE-SET ALARM TIME IS REACHED.

WAKE TO BUZZER ALARM

1. SLIDE THE FUNCTION SWITCH TO “AUTO” POSITION. TURN OFF THE VOLUME CONTROL UNTIL YOU HEAR A “CLICK” (BUZZER).
2. SET THE ALARM TIME.
3. YOU MAY WAKE UP BY BUZZER WHEN THE PRE-SET ALARM TIME IS REACHED.

TURN OFF THE ALARM

IF YOU WANT TO STOP THE ALARM, PRESS THE ALARM OFF ONCE. THE ALARM INDICATOR IS ON AND THE ALARM WILL GO OFF AGAIN AFTER 24 HOURS.
IF YOU SLIDE THE FUNCTION SWITCH TO "OFF" POSITION THE ALARM INDICATOR WILL SWITCH OFF AND THE ALARM WILL NOT RESUME AFTER 24 HOURS.

SNOOZE FUNCTION

WHEN THE ALARM SOUNDS, PRESSING THE SNOOZE BUTTON WILL TEMPORARILY STOP THE ALARM, AFTER 9 MINUTES THE ALARM WILL GO OFF AGAIN.

SLEEP FUNCTION

1. THIS FUNCTION ENABLES YOU TO GO TO SLEEP WHILE LISTENING TO THE RADIO.
2. SET THE FUNCTION SWITCH TO OFF OR AUTO POSITION.
3. PRESS THE SLEEP BUTTON. THE CLOCK DISPLAY WILL SHOW 59 MINUTES. THE RADIO TURNS ON AND WILL TURN OFF AUTOMATICALLY AFTER 59 MINUTES. PRESS THE SLEEP BUTTON AND THE HOUR BUTTON SIMULTANEOUSLY FOR ONE HOUR AND 59 MINUTES SLEEP TIME.
4. TO SELECT A SHORTER DURATION PRESS THE MIN BUTTON WHILE HOLDING THE SLEEP BUTTON UNTIL THE DESIRED SLEEP DURATION IS DISPLAYED.
5. TO TURN OFF THE RADIO AT ANY TIME DURING THE SLEEP MODE, PRESS THE SNOOZE BUTTON.

SLEEP TO MUSIC AND WAKE TO RADIO

REPEAT THE STEPS OF "WAKE TO RADIO". PRESS SLEEP TO SET A DESIRED PERIOD OF RADIO PLAYING BEFORE SLEEP. THE RADIO WILL TURN OFF AUTOMATICALLY AND WILL TURN ON AGAIN AT THE PRESET WAKE UP TIME.

LED DISPLAY DIMMER FUNCTION

TO ADJUST THE BRIGHTNESS OF THE LED DISPLAY, SIMPLY SLIDE THE DIMMER SWITCH (HI/LOW) TO “HI” OR “LOW” POSITION.

SAFETY WARNING

THE PRODUCT MUST NOT BE EXPOSED TO DRIPPING OR SPLASHING. THE NORMAL VENTILATION OF THE PRODUCT MUST NOT BE IMPEDED.

If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)

SPECIFICATIONS :

FREQUENCY RANGE : AM: 522-1620KHz
FM : 87.5-108MHz

POWER SOURCE : AC 230V~50Hz
DC 9V⎓ BACK UP

POWER CONSUMPTION : 6W

WARNING
EXPLANATION OF SYMBOLS:

WARNING

RISK OF ELECTRIC SHOCK

DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE CONVER(OR BACK(. NO USER SERVICEABLE PARTS INSIDE. REFERE SERVICEABLE PARTS INSIDE. REFERSERVICING TO QUALIFIED SERVICE PERSONNEL.

	The lightning flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s casing that may be sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIR OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.